

# PowerView Installation Guide



## Copyright

© GridSense, Inc. 2010-2012

The material presented in this manual is copyright protected by GridSense Inc.

Any reproduction in whole or in part for any purpose without the prior written consent of GridSense, Inc. is strictly prohibited.

Information in this document is subject to change without notice.

All trademarks are the property of their respective owners.

**Contents**

- 1 Introduction ..... 3
- 2 Installing POWERVIEW 4.6.3..... 4
- 3 Updating USB Driver ..... 5
  - 3.1 Windows 7 ..... 5
  - 3.2 Windows XP ..... 7
- 4 Technical Support ..... 8

## 1 Introduction

PowerView 4.6.3 is the latest software release for the PowerMonic data logger. Version 4.6.3 is bundled with the Firmware Loader and PM Synch software application. The latest release is incorporated with 3G remote communications allowing users to remotely access PowerMonic data.

Please refer to the **PM Sync Customer Manual** for configuring remote communications. Please note that remote communications is only applicable for PM35 and PM45.

The installation procedure is different for Windows XP and Window 7. Please follow the guidelines as listed in the following sections.

## 2 Installing POWERVIEW 4.6.3

**Please ensure that the PowerMonic data logger is not connected to the PC USB prior to software installation.**

- a) Step 1: Uninstall any old version of the PowerView software. Perform this operation by clicking on Start → All Programs → Gridsense → PowerMonic → PowerView (x) → Uninstall PowerView.
- b) Step 2: Insert the accompanying CD into the CD-ROM and software will boot automatically. If the **Autorun** window does not prompt, access the software root directory by right clicking on the CD Drive and selecting **Explore**. The setup file is **PV4setup\_4\_x\_x.EXE**. Run the setup file and follow the instructions as prompted.
- c) Step 3: During the installation process, the user will be asked to specify the operating frequency. Select either 50Hz or 60 Hz depending on your region.
- d) Step 4: Installation is now complete. The icons for PowerView, PM Sync and Firmware Loader will now appear as a desktop shortcut, should the user select the option. The program is also accessible through Start → All Programs → Gridsense → PowerMonic → PowerView 4 → PowerView.
- e) Step 5: (Optional for remote communication) Please access Gridsense FTP server to download the following files to the PC Desktop:
  - Firmware file
  - Utilities file
  - Manuals

**FTP Address:** ftp:\\customer.gridsense.com/Documents

**Login User name:** ftpguest

**Password:** gsnGu3st

Detailed instruction is available in the **Remote Communication Configuration** manual and **PM Sync** Manual.

### 3 Updating USB Driver

If the user has a PowerMonic PM30 or PM 40, please use the voltage cable before connecting to the USB port. However, if the user is using a PM35 or PM45 it is not necessary to do so as the PMX5 can be powered directly through the USB port. Windows 7 users are to follow guidelines stipulated in Section 3.1, whereas Windows XP users are to follow Section 3.2.

#### 3.1 Windows 7

##### a) Step 1

Right click on **My Computer** and click on **Properties**. Click on the **Hardware** tab and click on **Device Manager**. Expand **Other Device** selection and right click on PowerMonic (Note: It may appear as Unknown Device for some users). Select **Update Driver** and follow the instruction as guided by the **Hardware Wizard**. It is recommended that users select the option to **Search Automatically**. Proceed to step 2 if the user selects otherwise.

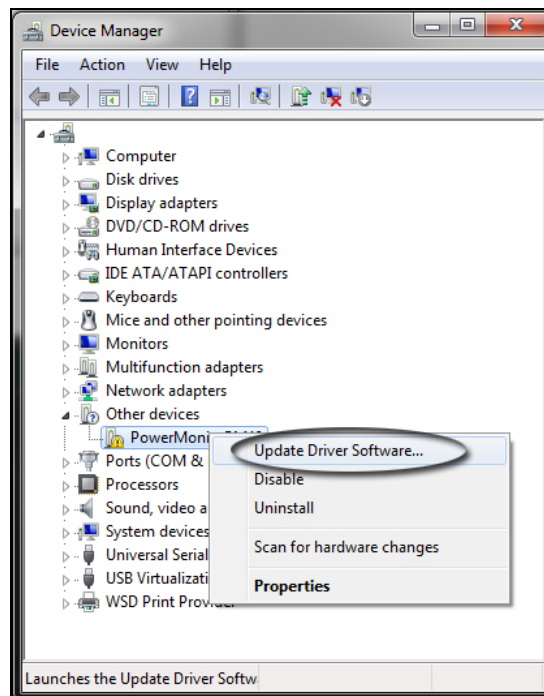


Figure 1: Update USB Driver

##### b) Step 2

If Browse is selected, the file will automatically point to the driver location. The driver file is located in **C:\Program Files\GridSense\PowerMonic\Driver**. See Figure 2 below.

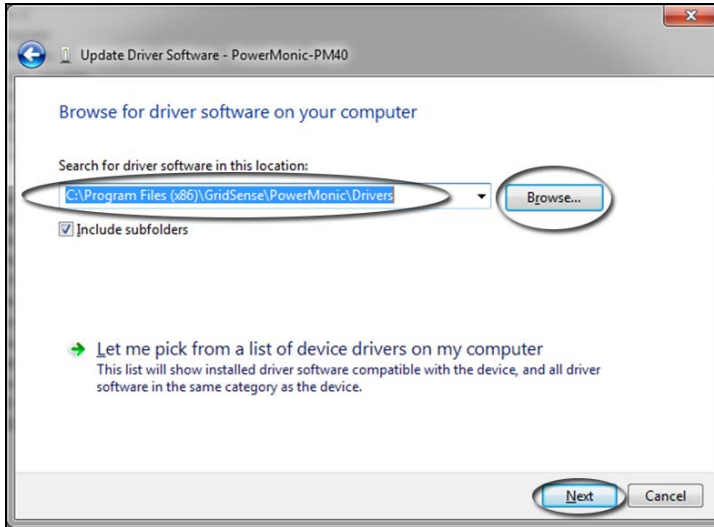


Figure 2: Driver File

c) Step 3

The following warning screen will pop up. Click **Install This Driver Software Anyway**

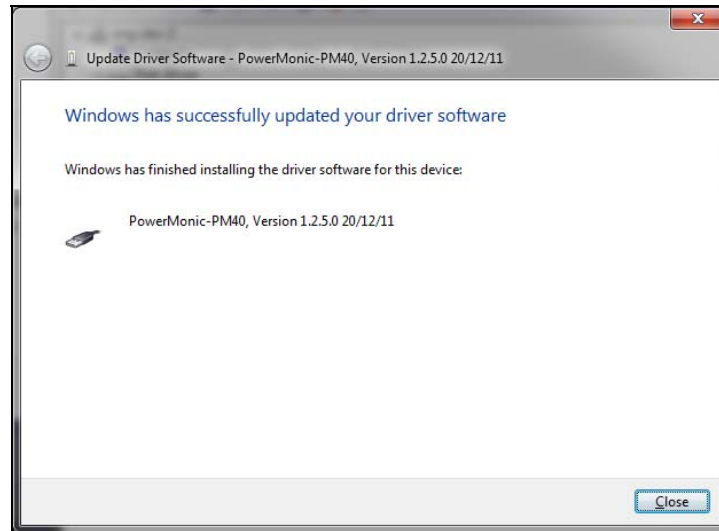


Figure 3: Warning File

Please wait while the driver is undergoing the update process.

d) Step 4

The update process is now complete. The following screen (Figure 4) will indicate successful installation process. Click close. The computer is now ready to communicate via the USB interface with the PowerMonic using PowerView.



**Figure 4: Successful USB Driver Update**

## 3.2 Windows XP

The driver is automatically updated when PowerView version 4.6.2 is installed.

Software installation and driver update process is now complete. The user may now commence using Power View 4.6.2 or establish remote communication. Please refer to the relevant manuals as mentioned Step 5 of Section 2.0, should the user wish to do so.

**Note: The dialog window in Figure 5 will pop-up when the PowerMonic is connected. Click ok and proceed with establishing remote communication if unit has 3G capabilities. Please refer to remote communication setup manual. If unit is without 3G connection ignore the window by clicking ok and proceed as normal.**



## **4 Technical Support**

For sales, technical support or any other inquiries, please contact the appropriate office below:

### **Australia, New Zealand, Africa, Asia-Pacific, Europe, and Middle East**

GridSense (ABN: 63 001 658 091)  
Unit 3 Ground Floor, 20-36 Nancarrow Avenue  
Meadowbank, NSW 2114  
Australia  
Tel: +61 2 8878 7700 | Fax: +61 2 8878 7788

### **North and South America**

GridSense Inc.  
2568 Industrial Blvd., Suite 110  
West Sacramento, California 95691  
USA  
Tel: +1 916 372 4945 | Fax: +1 916 372 4948